

# Indicators & Displays

1	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i>
2	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check</i>
3	Oil high temperature indicator	Lights when engine oil temperature is high enough to adversely affect the service life of the engine. If the oil high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 186. <i>Lamp Check</i>
4	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible. <i>Lamp Check.</i>
5	Multi-function display	The display includes the following functions. <i>Display Check.</i>
	Gear position indicator	Shows the gear position. (page 19 )
	Speedometer	Shows riding speed.
	Odometer	Shows accumulated mileage (page 20 ).
	Tripmeter	Shows mileage per trip (page 20 ).
	Hourmeter	Shows hours and tenths of hours of engine operation (page 21 ).
	Digital clock	Shows the time (hours and minutes) (page 22 ).