

## I

Idle speed adjustment .....	104
Ignition switch .....	14
Indicator	
4WD indicator .....	21,25
Neutral indicator.....	24
Oil high temperature indicator .....	24
Reverse indicator.....	24
Inspection, pre-ride.....	44

## L

Loading	
Loading guidelines and procedures.....	48
Weight limits.....	47
Lubrication	
(see Engine oil, Gear case oil and differential oil)	

## M

Maintenance	
Precautions .....	92
Schedule .....	90
Modifications .....	52
Multi-function display.....	26

## N

Neutral indicator .....	24
Noise emission control system.....	157

## O

Obstacles, riding over.....	86
Odometer .....	28
Oil (see Engine oil, Gear case oil and differential oil)	
Oil filler cap/dipstick .....	37, 106
Oil filter, changing.....	108
Oil high temperature indicator .....	24
Owner's manual compartment .....	40