Maintenance Schedule

	_		WHICHEVER		INITIAL	REGULAR		
FREQUENCY			COMES		MAINT.	MAINT. INTERVAL		ļ
			FIRST	mi	100	600	1200	Refer to
ITEMS			⇒	km	150	1000	2000	page
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVESHAFT BOOTS						
		REAR FINAL GEAR				(R:EVERY	ı	109
		CASE OIL AND				2 YEARS)		
		DIFFERENTIAL OIL						
	*	BRAKE FLUID	NOTE 3			I	<u> </u>	128
	*	BRAKE SHOE WEAR	NOTE 1					139
		BRAKE SYSTEM			!	11		128
	*	REVERSE LOCK			l		I	122
		SYSTEM						
		SKID PLATES, ENGINE				I	1	148
		GUARD						
	*	CLUTCH SYSTEM			I	<u> </u>	!	121
	*	SUSPENSION				1	I	
	*	SPARK ARRESTER				С	С	149
	*	NUTS, BOLTS,			1		I	_
		FASTENERS						
	**	WHEELS/TIRES						141
	**	STEERING SHAFT					1	_
		HOLDER BEARINGS						
-	**	STEERING SYSTEM						

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).

^{**} In the interest of safety, we recommend these items be serviced only by your Honda dealer.