

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi ⇔ km	100	600	1200		
				HOURS	150	1000	2000	
			NOTE	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE				I		—
	*	THROTTLE OPERATION				I		108
		AIR CLEANER	NOTE 1			C	C	105
		SPARK PLUG				I		115
	*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM				I		118
		ENGINE OIL			R	R	R	86
		ENGINE OIL FILTER			R	R	R	89
	*	TRANSMISSION OIL				R	R	93
	*	ENGINE IDLE SPEED			I	I	I	114
		RADIATOR COOLANT	NOTE 3			I	I	98
*	COOLING SYSTEM	NOTE 2			I	I	99	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).