

Clutch System

6. Start the engine, pull the clutch/parking brake lever in, and shift into gear. Make sure the engine does not stall and the ATV does not creep. Gradually release the clutch/parking brake lever and open the throttle. Your ATV should move smoothly and accelerate gradually.

Check the clutch cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.

Other Inspections & Lubrication

- Check that the clutch/parking brake lever assembly is positioned properly and the securing bolts are tight.
- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the clutch cable with a commercially-available cable lubricant to prevent premature wear and corrosion.