

If the High Coolant Temperature Indicator Lights

- Check the oil level. If necessary, add the recommended oil (page 89) to the upper level mark. If you must leave your ATV to get oil, secure it as much as possible.
- Start the engine, and check that the high coolant temperature indicator goes off.

If the indicator goes off — resume riding. If there is a leak — do not ride the ATV until the leak is repaired by a Honda dealer.

If there's a mild coolant leak, you can ride for awhile, carefully watching the indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your ATV to a Honda dealer (page 160).