

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		FIRST ⇨	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		114
AIR CLEANER		NOTE 1			C	C	110
SPARK PLUG					I		122
* VALVE CLEARANCE/ DECOMPRESSOR SYSTEM				I	I	I	125
ENGINE OIL				INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			92
ENGINE OIL FILTER				R	R	R	96
* TRANSMISSION OIL					R	R	99
* ENGINE IDLE SPEED				I	I	I	120
RADIATOR COOLANT		NOTE 3			I	I	104
* COOLING SYSTEM		NOTE 2			I	I	105

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.