




# Controls & Features

## Engine Stop Switch



LEFT HANDLEBAR

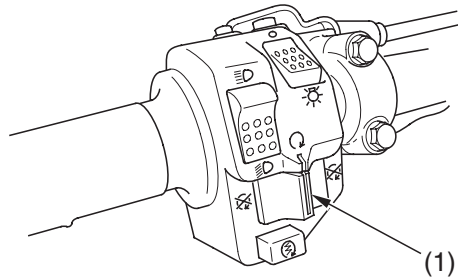

(1) engine stop switch

○ RUN  
⊗ OFF



The engine stop switch (1) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (⊗) position. The switch must be in the RUN (○) position to start the engine, and it should normally remain in the RUN (○) position even when the engine is OFF.

(TRX450ER only)

If your ATV is stopped with the ignition switch ON ( | ) and the engine stop switch OFF ( ⊗ ), the battery will discharge. Turn the ignition switch OFF ( ○ ) to prevent battery discharge.

