
## **Starting & Stopping the Engine**

- 2. With the throttle closed, press the start button (2).
  - Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.
- 3. Immediately after the engine starts, operate the choke knob to keep fast idle.
- 4. About a half minute after the engine starts, push the choke knob right all the way to fully OFF (B).
- 5. If idling is unstable, open the throttle slightly.

Normal Air Temperature  $10^{\circ} - 35^{\circ}C (50^{\circ} - 95^{\circ}F)$ (TRX450R)

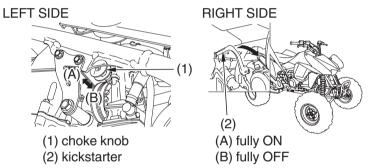

- 1. Pull the choke knob (1) left all the way to fully ON (A) position, if the engine is cold.
- 2. Lightly depress the kickstarter (2) until resistance is felt. Then let kickstarter return to the top of its stroke. With the throttle closed, operate the kickstarter.
- 3. Immediately after the engine starts, operate the choke knob to keep fast idle.
- 4. About a half minute after the engine starts, push the choke knob right all the way to fully OFF (B).
- 5. If idling is unstable, open the throttle slightly.

Basic Operation & Riding 51

