Brakes

Parking Brake Adjustment

Refer to Safety Precautions on page 77.

Parking brake adjustment may be required if the parking brake does not hold properly.

LEFT HANDLEBAR

(1)

(3)(2) (5) (6)(4)(4) lock nut (1) dust cover (2) lock nut (5) parking brake arm

(6) adjusting bolt

REAR

Adjustment

(3) adjuster

- 1. Temporarily adjust the clutch lever/parking brake lever freeplay to more than 30 mm (1.2 in) (page116).
- 2. Pull back the dust cover (1).
- 3. Loosen the lock nut (2) on the parking brake cable, and screw in the adjuster (3) completely.
- 4. Loosen the lock nut (4) on the parking brake arm (5) and turn the adjusting bolt (6) clockwise until you feel resistance.
- 5. Then turn the adjusting bolt (6) 1/8 counterclockwise, and tighten the lock nut (4).

142 Servicing Your Honda