

## **Storing Your Honda**

- 13. Place your ATV on blocks to lift all tyres off the floor.
- 14. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

## Removal from Storage

Refer to Safety Precautions on page 77.

- 1. Uncover and clean your ATV.
- 2. If your ATV has been stored for more than four months change the engine oil (page 96) and transmission oil (page102). Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
- 3. If your ATV has been stored for more than two months ask your Honda dealer to drain and replace the fuel.
- 4. Lubricate the drive chain (page 157).
- 5. (TRX450ER only)
  Charge the battery (page 163) as required. Install the battery.
- 6. Perform a pre-ride inspection (page 33 ), then test-ride your ATV at low speeds.