



## If the High Coolant Temperature Indicator Lights

---

(TRX450ER)

Normally, the high coolant temperature indicator will only light momentarily when you turn the ignition ON ( I ).

(TRX450R)

Normally, the high coolant temperature indicator will only light momentarily when you start and running the engine.

Occasionally, it may flicker at or near idling speed.

High coolant temperature may be caused by restriction of air flow to the radiator (such as mud caked on the radiator), extended idling, an oil leak, a coolant leak, a low oil level, a low coolant level, or extended operation under adverse conditions.

If the indicator comes on while you're riding, don't ignore it. Pull safely to a stop. Stop the engine as soon as it's safe to do so, and let it cool.

### NOTICE

*Continuing to ride with high coolant temperature or an overheated engine can cause serious engine damage.*

- A steaming engine indicates a coolant leak. Shut the engine off and wait until the steaming stops. Look for a leak, but don't touch the engine or radiator system. Let everything cool off first.
- Check for any restriction of air flow through the radiator.
- If there's no obvious problem, leave the engine on so the fan and coolant circulating system can continue working. Monitor the high coolant temperature indicator. The indicator may turn off after a brief stop with no load on the engine.
- Check the radiator fan. If the fan is not working, have your Honda dealer check for problems. If the radiator fan is working, visually check the coolant level in the reserve tank, located under the steering cover. It isn't necessary to touch the radiator system.

(cont'd)

