




If a Fuse Blows (TRX450ER only)

Main Fuse Access

INSIDE THE BATTERY COVER

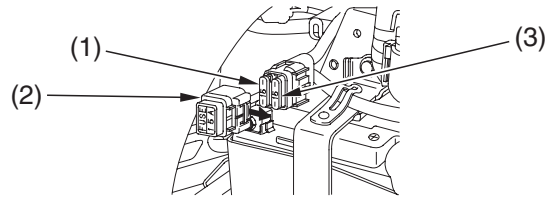

- (1) main fuse (3) spare main fuse
(2) fuse case cover

1. To prevent an accidental short circuit, turn the ignition switch OFF (\bigcirc) before checking or replacing the fuse.
2. To access the main fuse (1), remove the battery cover (page 161).
3. Remove the fuse case cover (2).
4. Pull the main fuse out.
If it is blown, install the spare main fuse (3).

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

5. Reinstall the fuse case cover.
6. Install the battery cover.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your ATV. Leave the blown fuse in that circuit and have your ATV checked by your Honda dealer.

192 Taking Care of the Unexpected