

MAINTENANCE SCHEDULE

	FREQUENCY ITEMS	Whichever comes first ⇒ NOTE	INITIAL		REGULAR		Refer to page
			mi	100	MAINTENANCE INTERVAL		
					600	1200	
km	150	1000	2000				
			HOURS	20	100	200	
EMISSION RELATED ITEM	* FUEL LINE					I	—
	* THROTTLE OPERATION					I	98
	* CARBURETOR CHOKE					I	103
	AIR CLEANER	(NOTE 1)			C	C	99–101
	AIR CLEANER HOUSING	(NOTE 2)			I	I	102
	DRAIN TUBE						
	SPARK PLUG				I	I	114–115
	* VALVE CLEARANCE			I	I	I	115
	ENGINE OIL			R	R	R	35, 106–110
	ENGINE OIL FILTER			R	R	R	106–110
* ENGINE IDLE SPEED			I	I	I	104	

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate