

Low (L)

To shift to Low, press the release button on the side of the shift lever. Use this position to get more power when climbing, and for maximum engine braking when going down steep hills.

When the gearshift lever is in Low (L) position, you can select automatic shift mode or the manual shift mode (ESP mode).

Automatic shift mode:

In this mode, the transmission selects low range ratios.

There is no difference in performance in the D1 mode and the D2 mode.

The gear position indicator shows "L."

Manual shift mode (ESP mode):

You can shift gears much like a manual transmission in the low ratio.

The gear position indicator shows selected position and drive mode indicator shows "LOW" and "ESP."

Reverse (R)

To shift to Reverse from Neutral, bring the FOURTRAX to a complete stop first. Press the release button before shifting into Reverse from Neutral.

Before shifting, bring the FOURTRAX to a complete stop.

CAUTION:

Bring the FOURTRAX to a complete stop before moving the shift lever. If the shift lever is moved while the vehicle is moving, the transmission may be damaged.