

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL		
				mi	600	1200	
				km	1500	2000	
NOTE	HOURS	20	100	200			
EMISSION RELATED ITEMS	*	FUEL LINE				I	—
	*	THROTTLE OPERATION				I	108
	*	CARBURETOR CHOKE				I	114
		AIR CLEANER	(NOTE 1)			C	109 – 112
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	113
		SPARK PLUG				I	126 – 127
	*	VALVE CLEARANCE			I	I	128
		ENGINE OIL			R	R	42, 117 – 122
		ENGINE OIL FILTER			R	R	120 – 122
	*	ENGINE IDLE SPEED			I	I	115
		RADIATOR COOLANT	(NOTE 3)			I	43, 129 – 131
	*	COOLING SYSTEM	(NOTE 2)			I	129 – 132

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate