

	ITEMS	FREQUENCY	Whichever comes first ⇨	INITIAL	REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL		
				mi	600	1200	
				km	1000	2000	
NOTE	HOURS	20	100	200			
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS				I	I	159
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)	I	123 – 125
	* BRAKE FLUID	(NOTE3)			I	I	143 – 144
	* BRAKE SHOE WEAR	(NOTE1)				I	148
	BRAKE SYSTEM			I	I	I	140 – 149
	SKID PLATES, ENGINE GUARD				I	I	156
	* SUSPENSION				I	I	—
	* SPARK ARRESTER				C	C	157
	* NUTS, BOLTS, FASTENERS			I		I	—
	** WHEELS/TIRES			I	I	I	150 – 154
	** STEERING SHAFT HOLDER BEARINGS					I	—
	** STEERING SYSTEM					I	—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.