

## **Coolant Replacement**

Coolant should be replacement by your Honda dealer, unless you have the proper tools and service deta and are mechanically qualified. Refer to the official Honda Service Manual (page 181).

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Removing the radiator cap while the engine is hot.**

#### **WHAT CAN HAPPEN**

**Hot coolant spray out and could scald you.**

#### **HOW TO AVOID THE HAZARD**

**Always let the engine and radiator cool down before removing the radiator cap.**

#### **NOTE:**

To protect the environment, please dispose of used coolant properly. We suggest you place used coolant in a sealed container and take it to your local service station for reclamation. Do not put it in the trash or pour it on the ground.