

## ELECTRICAL SYSTEM

### BATTERY

Your FOURTRAX battery is located in a compartment under the seat. The battery is sealed, so it is not necessary to check the electrolyte level or add distilled water. If the battery seems weak, see your authorized Honda dealer for information on recharging or replacement. If you replace the battery, choose one that is sealed and equivalent to the original. Be sure to read and follow all safety precautions indicated on the battery.

#### CAUTION:

**Do not attempt to remove the caps from the battery cells as this may damage the battery.**

Although the battery is sealed, it vents explosive gases and should be handled with appropriate care.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Allowing open flames or sparks near the battery.**

#### **WHAT CAN HAPPEN**

**Gases may explode and possibly cause injury.**

#### **HOW TO AVOID THE HAZARD**

**Do not allow open flames or sparks near the battery.**

When the FOURTRAX is to be stored for an extended period, remove the battery from the vehicle and charge it fully. Then store it in a cool, dry place. If the battery is to be left on the vehicle, disconnect the negative cable from the battery terminal.

**WARNING:** Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**