

Drive Mode Select Switch

The drive mode select switch (1) (Fig. 2-25) is located in the left side of the handle cover.

This switch has three positions, D1, D2, and ESP (page 36).

To select the drive mode, bring the FOURTRAX to a complete stop and turn the switch.

The mode will not change if the switch is operated while the vehicle is moving.

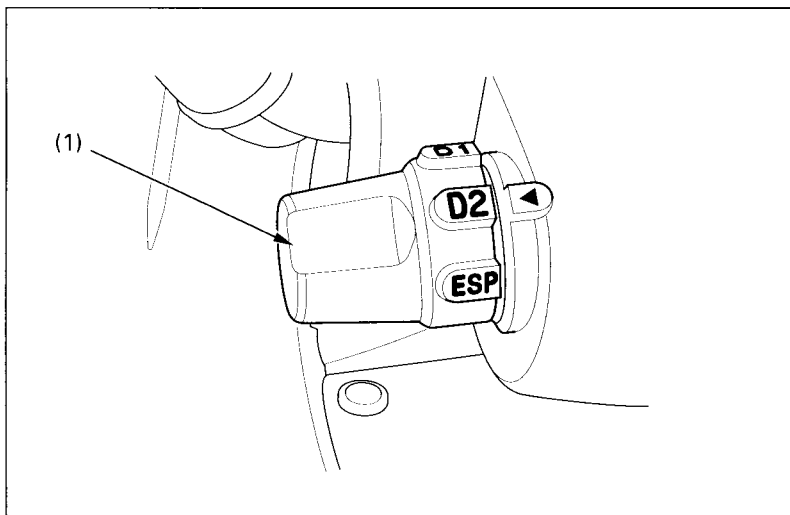


Fig. 2-25 (1) Drive mode select switch