

FREQUENCY ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page
		MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE	MAINTENANCE INTERVAL	
		mi	100	600	1200	
	km	150	1000	2000		
NOTE	HOURS	20	100	200		
DRIVE SHAFT BOOTS						159
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2 YEARS)		123 – 125
* BRAKE FLUID	(NOTE 3)					143 – 144
* BRAKE SHOE WEAR	(NOTE 1)					148
BRAKE SYSTEM						140 – 149
SKID PLATES, ENGINE GUARD						156
* SUSPENSION						—
* SPARK ARRESTER				C	C	157
* NUTS, BOLTS, FASTENERS						—
** WHEELS/TYRES						150 – 154
** STEERING SHAFT HOLDER BEARINGS						—
** STEERING SYSTEM						—

* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

** In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
2. Service more frequently after riding in very wet or muddy conditions.
3. Replace every 2 years. Replacement requires mechanical skill.