

Coolant Replacement

Coolant should be replacement by your Honda dealer, unless you have the proper tools and service deta and are mechanically qualified.

⚠ WARNING

POTENTIAL HAZARD

Removing the radiator cap while the engine is hot.

WHAT CAN HAPPEN

Hot coolant spray out and could scald you.

HOW TO AVOID THE HAZARD

Always let the engine and radiator cool down before removing the radiator cap.

NOTE:

To protect the environment, please dispose of used coolant properly. We suggest you place used coolant in a sealed container and take it to your local service station for reclamation. Do not put it in the trash or pour it on the ground.