

2. Remove the seat (page 155).
3. Remove the rear fender lid (page 134).
4. Remove the fuse box cover (page 136).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

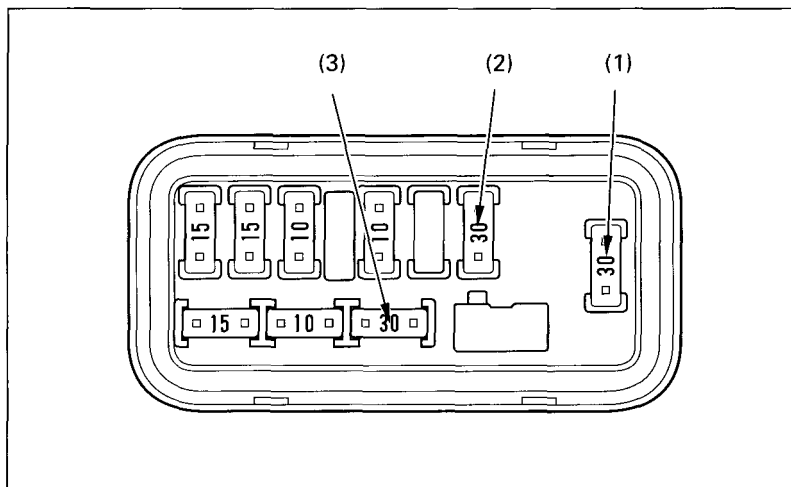


Fig. 4-24 (1) Main fuse

(2) Control motor fuse

(3) Spare main fuse

To replace the sub fuses:

1. Make sure the ignition switch is ○ (OFF).

CAUTION:

Turn the ignition switch ○ (OFF) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.