

Shifting Gears

The gearshift lever (1) is located on the left side of the fuel tank. To shift the gearshift lever, bring the ATV to a complete stop.


NOTICE

If the gearshift lever is moved while the vehicle is moving, the sub-transmission may be damaged.

For most shifts, move the gearshift lever without pushing the release button (2).

You must push the release button before moving the gearshift lever in the following two situations:

- To shift out of Neutral (N)
- To shift down to Low (L) from Drive (D)

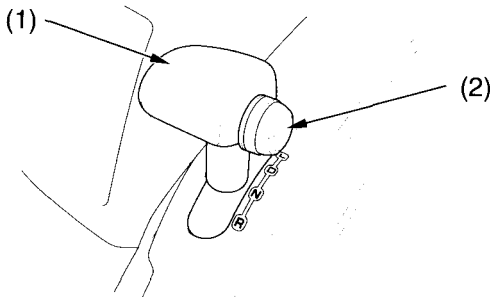

(1) gearshift lever

(2) release button

If the gearshift lever will not move easily to another gear position, rock the vehicle back and forth slightly to line up the gears in the sub-transmission.