

Shifting Gears

If the Battery is Dead:

Your ATV will operate even if the battery is dead, as long as the engine is running. If the engine is not running, it may be started using the recoil starter. See your Honda dealer to have the battery recharged or replaced.

1. Shift the gearshift lever in Neutral (N) position.
2. Apply the parking brake.
3. Turn the ignition switch to the "ON" (I) position.
4. Use the recoil starter (page 67) to start the engine.