


Seat Removal

Refer to *Safety Precautions* on page 99 .

The seat must be removed for the air cleaner, spark plug, battery and fuse maintenance.

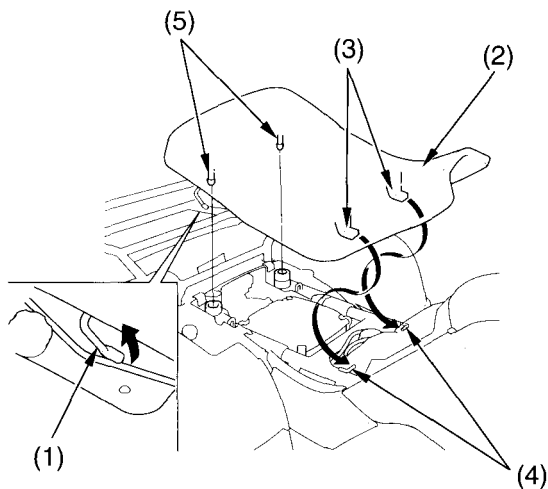

(1) seat lock lever

(2) seat

(3) front prongs

(4) hooks

(5) studs

Removal

1. Pull the seat lock lever (1) at the right side of the seat.
2. Slide the seat (2) back and lift it.

Installation

1. Insert the front prongs (3) into the hooks (4) on the frame and press the studs (5) into the grommets on the battery holder.
2. Press down on the seat until locks.