

Engine Oil & Filter

10. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 188).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

11. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
12. Install the drain bolts and tighten to the specified torque:
Oil tank drain bolt:
25 N·m (2.5 kgf·m , 18 lbf·ft)
Crankcase drain bolt:
25 N·m (2.5 kgf·m , 18 lbf·ft)
13. Install the front engine guard, the 28 mm washers, and the mounting bolts. Tighten the mounting bolts.
14. Fill the oil tank with the recommended grade oil; approximately:
4.9 ℓ (5.2 US qt , 4.3 Imp qt)
15. Reinstall the oil filler cap.
16. Start the engine and let it idle for 5 minutes.
17. Stop the engine and after a few minutes, remove the oil filler cap and dipstick.
18. Add the recommended oil up to the upper level mark. (Do not overfill.)
19. Reinstall the oil filler cap and dipstick.
20. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.