

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		↔	km	150	1000	2000		
			mi	100	600	1200		
		NOTE	HOURS	20	100	200		
* FUEL LINE						I	—	
* THROTTLE OPERATION						I	139	
* CARBURETOR CHOKE						I	141	
AIR CLEANER	NOTE 1					C	C	133
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2					I	I	138
SPARK PLUG							I	144
* VALVE CLEARANCE				I	I	I		147
ENGINE OIL				INITIAL=150km (100mi), 20 operating hours or 1 month : R REGULAR=Every 1000km (600mi), 100 operating hours or 12 months : R				116
ENGINE OIL FILTER				R	R	R		121
* ENGINE IDLE SPEED				I	I	I		142
RADIATOR COOLANT	NOTE 3					I	I	129
* COOLING SYSTEM	NOTE 2					I	I	—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.