



Spark Plug

Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 101.

1. Remove the seat (page 112).
2. Loosen the screw (1) and remove the resonance chamber (2).
3. Remove the resonance chamber (3).
4. Unhook the rubber cover (4).
5. Clean any dirt from around the spark plug base.
6. Disconnect the spark plug cap (5). Take care to avoid damaging the spark plug wire when disconnecting the cap.
7. Using the spark plug wrench, remove the spark plug.
8. Inspect the electrodes and centre porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
9. Make sure that a 1.0 mm wire-type feeler gauge cannot be inserted between the spark plug gap (6). If the gauge fits in the gap, replace the plug with a new one.

UNDER SEAT

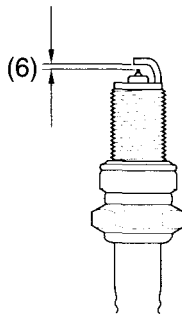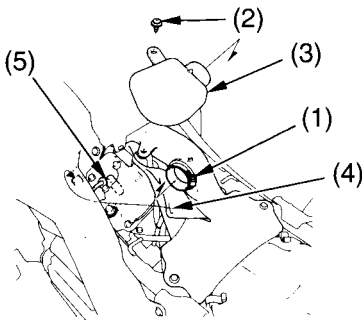

- | | |
|-----------------------|--------------------|
| (1) screw | (4) rubber cover |
| (2) clip | (5) spark plug cap |
| (3) resonance chamber | (6) spark plug gap |