Storing Your Honda

Preparation for Storage

Refer to Safety Precautions on page 101.

This procedure requires a means for draining and disposing of drained fuel (page 190).

- 1. Change the engine oil and filter (page 121).
- 2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 129).
- 3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.
- 4. Check that the fuel valve is OFF.
- 5. Drain the carburetor into an approved petrol container and dispose of it in an approved manner (page 190).
 - If storage will last longer than one month, carburetor draining is important, to assure proper performance after storage.

AWARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

(cont'd)