

# Indicators & Displays


(TRX500FGA only)

- To change the display from hourmeter to digital clock, press and release the hourmeter/digital clock select button ( 1 ).

To adjust the time manually, proceed as follows for TRX500FGA :

1. Turn the ignition switch ON ( 1 ).
2. Press and hold the hourmeter/digital clock select button for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.
3. To advance the hour display one unit at a time, press and release the plus button ( 2 ) or minus button ( 3 ).

To advance the hour display automatically, press and hold the plus button or minus button. After two seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.

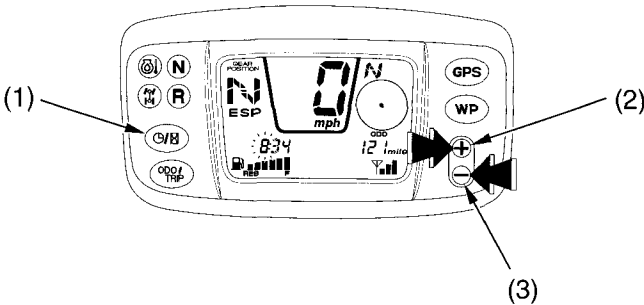

(1) hourmeter/digital clock  
select button

(3) minus button

(2) plus button