



Indicators & Displays

1	RESET button (TRX500FA)	Resets the tripmeter to zero (0) (page 26). This button also used to reset the oil change indicator (page 24).
2	Odometer/tripmeter select button (TRX500FA)	Selects display of the odometer or tripmeter A or tripmeter B (page 26). This button also used to reset the oil change indicator (page 24).
	Odometer/tripmeter select button (TRX500FGA/FPA)	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 27). This button also used to reset the oil change indicator (page 24).
3	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible. <i>Lamp Check.</i>
4	High oil/coolant temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the high oil/coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 250. <i>Lamp Check.</i>
5	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check.</i>
6	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check.</i>

