

# Controls & Features

---

## **PS (Electric Power Steering) (TRX500FPE only)**

This ATV is equipped with an electronically-controlled, electric-power-assisted steering system.

While the engine running, the PS (Electric Power Steering) system provides power from the electric motor, which helps you to turn ATV's handlebar more easily.

Under extreme conditions, the PS system reduces power that helps easily steer the handlebar. This can prevent the system from overheating caused by either continuously turning the handlebar at low speed or continuously applying high torque to the steering shaft. Under such conditions, you may feel the handlebar heavier, but it is not a malfunction.

The PS indicator should light when the ignition switch turned ON ( I ) and remain on until the engine is started.

The PS indicator also lights when there is any abnormality in the PS system. If this occurs, the electric power assist for turning will not be available, but the manual steering system will perform as usual.

If the PS indicator lights at any time while riding, reduce speed and take your ATV to a Honda dealer as soon as possible. Continuing to ride with a PS system problem can cause system damage.

Do not modify your Electric Power Steering system. In case of a malfunction, take your ATV to a Honda dealer.