

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		133
*	CARBURETOR CHOKE				I		135
	AIR CLEANER	NOTE 1			C	C	127
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	132
	SPARK PLUG				I	I	139
*	VALVE CLEARANCE				I	I	142
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			114
	ENGINE OIL FILTER			R	R	R	119
*	ENGINE IDLE SPEED			I	I	I	138

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 224).