

# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 99 .

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

### NOTICE


*Using the wrong oil filter may result in leaks or premature engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 184 ). If you do not have the skills or the tools, see your Honda dealer.

#### *Drain the Engine Oil:*

1. With the ATV on the level ground, remove the left engine sub cover (page 117 ) and the oil filler cap/dipstick from the rear crankcase.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

#### UNDER ENGINE

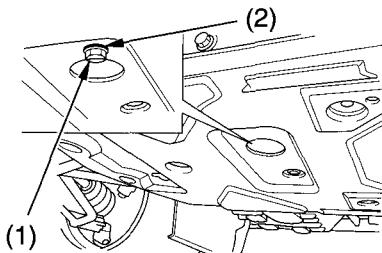

(1) engine oil drain plug

(2) sealing washer