



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		133
* CARBURETOR CHOKE					I		135
AIR CLEANER	NOTE 1				C	C	127
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	132
SPARK PLUG					I	I	139
* VALVE CLEARANCE				I	I	I	142
ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			114
ENGINE OIL FILTER				R	R	R	119
* ENGINE IDLE SPEED				I	I	I	138

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

102 Servicing Your Honda

