


# Controls & Features

---

## Starting Primer Knob

RIGHT SIDE

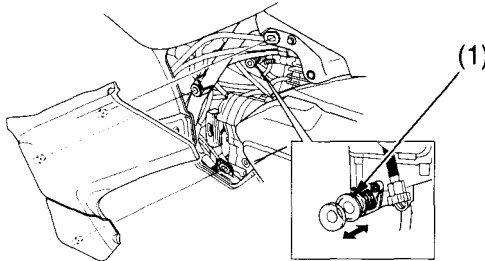


(1) starting primer knob

The starting primer knob ( 1 ) is located on the carburetor float bowl. The knob may be used when starting the engine in extremely cold weather (  $-15^{\circ}\text{C}$ ,  $5^{\circ}\text{F}$  ). See *Starting Procedure*, page 65 .

## Recoil Starter

RIGHT SIDE

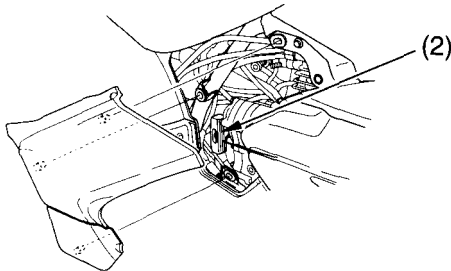

(2) recoil starter

The recoil starter ( 2 ) is used to start the engine when the battery is low. See *Using the Recoil Starter*, page 69 .