



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
DRIVESHAFT BOOTS						161	
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		119, 121	
* BRAKE FLUID	NOTE 3					141	
* BRAKE SHOES WEAR	NOTE 1					150	
* BRAKE PADS WEAR	NOTE 1, 2					144	
* BRAKELIGHT SWITCH						151	
BRAKE SYSTEM						141	
* REVERSE LOCK SYSTEM						133	
SKID PLATES, ENGINE GUARD						160	
* CLUTCH SYSTEM						132	
* SUSPENSION						—	
* SPARK ARRESTER				C	C	139	
* NUTS, BOLTS, FASTENERS						—	
** WHEELS/TIRES						153	
** TIE-ROD AND JOINT BOOTS						—	
** STEERING SHAFT HOLDER BEARINGS						—	
** STEERING SYSTEM						—	

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.