



Indicators & Displays

1	Odometer/tripmeter select button	Selects display of the odometer or tripmeter A or tripmeter B (page 22). This button also used to reset the oil change indicator (page 21).
2	RESET button	Resets the tripmeter to zero (0) (page 23). This button also used to reset the oil change indicator (page 21).
3	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check.</i>
4	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible. <i>Lamp Check.</i>
5	High oil/coolant temperature indicator	Lights when engine oil temperature is high enough to adversely affect the service life of the engine. If the high oil temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 193. <i>Lamp Check.</i>
6	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check.</i>

