

Indicators & Displays


Fuel Gauge

The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

16.8 \((4.44 US gal , 3.70 Imp gal)

When segment $E\left(2\right)$ and low fuel indicator (3) flash, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:


5.3 l (1.40 US gal , 1.17 Imp gal)

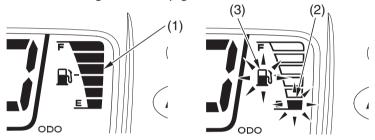

- (1) fuel gauge
- (2) segment E

(3) low fuel indicator

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

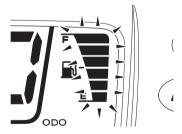

26 Instruments & Controls

