Storing Your Honda

Preparation for Storage

Refer to Safety Precautions on page 99.

This procedure requires a means for draining and disposing of drained fuel (page 180).

- 1. Change the engine oil and filter (page 119).
- 2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 126).
- 3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.

(cont'd)

Tips 177

