


# Indicators & Displays

(For TRX680FGA)

1. Turn the ignition switch ON ( 1 ).
  - To change the display from hourmeter to digital clock, press and release the digital clock/hourmeter select button ( 1 ).
2. Press and hold the digital clock/hourmeter select button for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.
3. To advance the hour display one unit at a time, press and release the plus button ( 2 ) or minus button ( 3 ).  
To advance the hour display automatically, press and hold the plus button or minus button. After 2 seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.

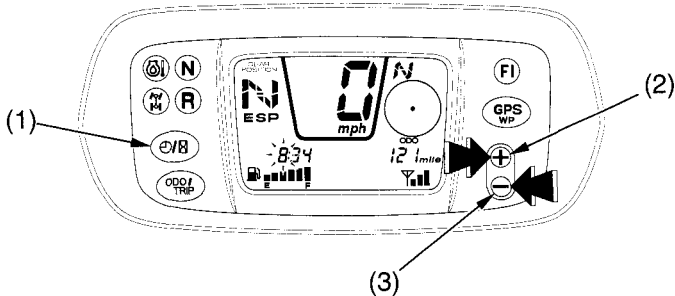

(1) hourmeter/digital clock  
select button

(2) plus button

(3) minus button

(cont'd)