

GPS Mode

To Correct Input:

Push the GPS/WP button (1). This reverses the sequence so you can back up and make a correction.

Once the 1/10 second longitude entry is completed, you can no longer back up in the sequence to make a correction.

To Change the Coordinates for an Existing Waypoint Number:

Follow steps 1 – 4 under *Advance Waypoint Selection* (page 65) and “overwrite” your previous waypoint.

Determining the Coordinates of Your Current Position

1. If your current position is not already marked, mark it (page 63).
2. Press and hold the GPS/WP button until the display begins blinking.
3. While the display is still blinking, press and hold the GPS/WP button again until the display shows LAT degrees and minutes.
4. Tap (do not hold) the GPS/WP button repeatedly to sequence through the coordinates display.
5. Tap the GPS/WP button again to return to the distance to waypoint display.