


If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Remove the seat (page 140).
3. To access the main fuse (2) (3), remove the fuse box cover (4).

UNDER SEAT

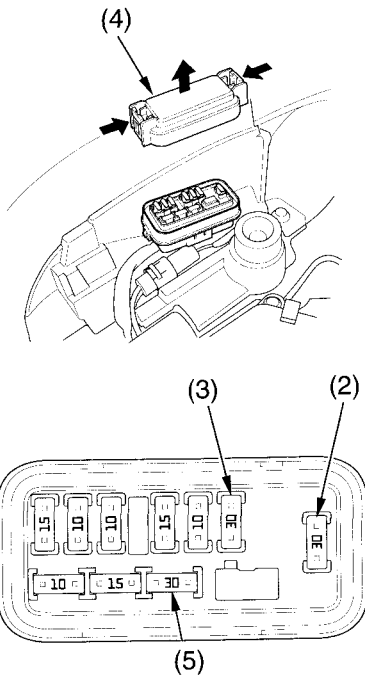

- (2) main fuse 1
(3) main fuse 2

- (4) fuse box cover
(5) spare main fuse

4. Pull the main fuse out.
If it is blown, install the spare main fuse (5).

(cont'd)