



## Riding in Reverse

---

4. Leaving your left hand on the clutch lever/parking brake lever, remove your right hand from the throttle and place it on the reverse assist lever (3). Pull and hold the reverse assist lever.

### NOTICE


*Your ATV may be equipped with reverse speed limiter and reverse gear rev limiter, which help the vehicle to maintain a safe speed while riding in reverse gear.*

5. While holding the reverse assist lever, depress the shift lever to reach the reverse gear (below 1st gear). Make sure that the reverse indicator (4) comes on.
6. Remove your right hand from the reverse assist lever.
7. Release the rear brake pedal.
8. Slowly release the clutch lever/parking brake lever and open the throttle gradually to begin reverse operation.




RIGHT SIDE

CENTRE OF HANDLEBAR

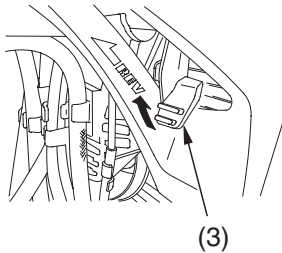

(3) reverse assist lever

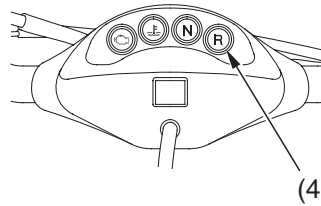

(4) reverse indicator

9. Ride slowly. Do not open the throttle suddenly or make abrupt turns.
10. To stop, pull in the clutch lever/parking brake lever, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.

