


Brakes

6. Push down the parking brake pin (7) and then squeeze the clutch lever/parking brake lever (8) until firm resistance is felt. Measure the distance the clutch lever/parking brake lever has moved; the distance should be:
25 – 30 mm (1.0 – 1.2 in)
7. If necessary, adjust the clutch lever/parking brake lever freeplay (page 119).

LEFT HANDLEBAR

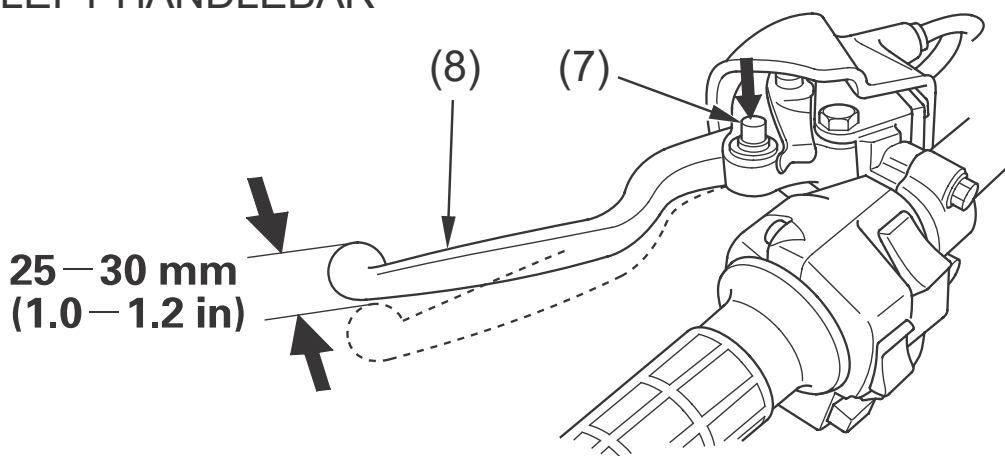

- (7) parking brake pin
- (8) clutch lever/parking brake lever

Check the clutch lever/parking brake lever and parking brake cable for loose connections or other damages. If the parking brake cable is worn or kinked, have it replaced by your Honda dealer.

Other Inspections & Lubrication

- Check that the clutch lever/parking brake lever assembly is positioned properly and the securing bolts are tight.
- Check the parking brake cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the parking brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.