

1. Engine oil.

Check the oil level and add oil if required (page 128).

Check for leaks.

