

To remove the air intake restrictor:

1. Remove the seat (page 147).
2. Unlatch the four retainer clips (3) and remove the air cleaner housing lid (4).
3. Remove the air intake restrictor (5).
Reinstall in the reverse order of removal.

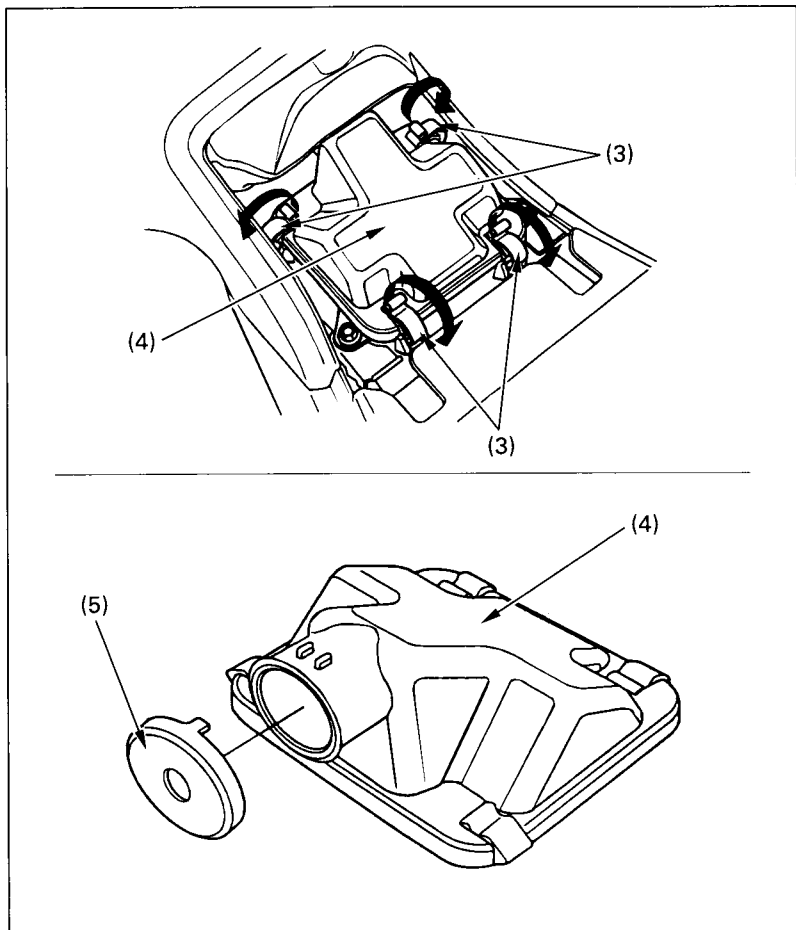


Fig. 3-9

(3) Retainer clips
(4) Air cleaner housing lid

(5) Air intake restrictor