


Operating Control

Recoil Starter

The recoil starter (1) is used to start the engine. See *Starting Procedure*, page 56 .

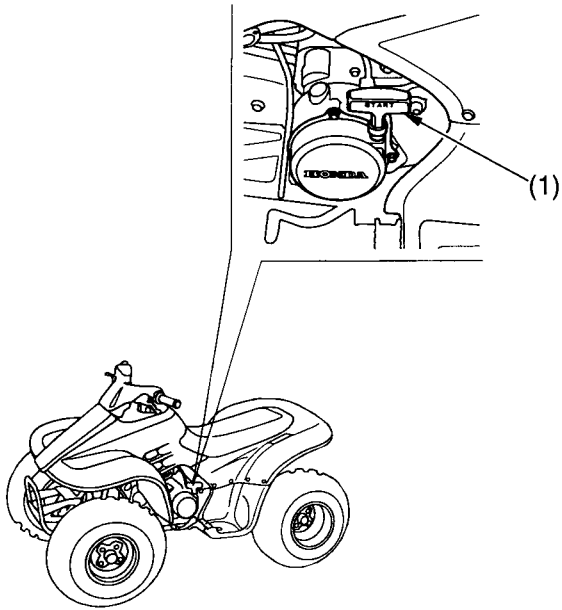

(1) recoil starter