

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	km	100	600	1200	
			↔	→	150	1000	2000	
			NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	*	FUEL LINE					I	—
	*	THROTTLE OPERATION					I	109
	*	AIR CLEANER	NOTE 1				C	105
		SPARK PLUG					I	113
		VALVE CLEARANCE			I	I	I	116
		ENGINE OIL			R	R	R	99
	**	ENGINE OIL STRAINER SCREEN					C	—
	**	ENGINE OIL CENTRIFUGAL FILTER					C	—
	*	ENGINE IDLE SPEED			I	I	I	112
	*	SECONDARY AIR SUPPLY SYSTEM					I	—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 182).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.